



P.O. Box 1081, 100 Victory Drive, Milford, PA 18337 (570) 296-4559 FAX: (570) 296-9298

T3C-500 Instructions

Thank you for purchasing the new Multi-Station Transmitter from Long Range. The T3C can be used to control up to 4 5-Stand fields or 16 Sporting Clay stations. It has a built-in counter that can be reset at any time. A battery re-charging adaptor is included.

When you receive your T3C-500, it will have a USER ID of 1-2-3-4. Remember this. If you ever have trouble with your USER ID, you can use 3-6-1-9 as a master USER ID. The 3-6-1-9 code should be known by only the course owner.

BUTTON DESCRIPTION:

Program	Allows you to enter the Programming Mode
Station	Allows you to enter current sporting clay station number
Count	Displays number of targets thrown since last reset
Clear	Allows you to check battery level on scale of 0-5, with 5 being charged/0 being dead. Also acts like a clear button on a calculator.
True Pair	Allows you to throw 2 traps at the same time
Fire Enter	Fires the traps in true pair mode; acts like an ENTER button in programming mode.
Buttons 1-8	When screen is blank and in 5-Stand mode, if you press a trap ID number, it will fire immediately. In Sporting Clay mode, only Trap 1, Trap 2, and DBLS buttons are active.
Buttons 9, 0	In 5-Stand mode, these buttons will put the T3C in horizontal or vertical mode. (See further details in "Wobble Trap" information section.)

TO CHANGE THE USER ID:

1. Press PROG – The number 9 will appear.
2. Enter current USER ID, (1-2-3-4) and press ENTER. The number 1 will appear.
3. Enter 01 and press ENTER. 888 will appear on the screen.
4. Enter new USER ID, (up to 4 digits) and press ENTER.
5. Screen will blank. Press PROG. When number 9 appears, enter new USER ID, press ENTER. The number 1 will appear indicating it is ready for use.

TO PROGRAM 5-STAND OR SPORTING CLAY MODES:

1. Press PROG—The number 9 will be displayed.
Press current USER ID or 1-2-3-4 and press ENTER. The number 1 will appear.
2. Enter 05 and press ENTER for 5-Stand Mode or
Enter 06 and press ENTER for Sporting Clay Mode.

TO PROGRAM SPORTING CLAYS – STATION, TRAP 1, TRAP 2:

1. Press PROG—The number 9 will appear.
2. Enter current USER ID or 1-2-3-4 and press ENTER—The number 1 will appear.
3. Press STATION—The number 2 will appear. Press the Station number to change, and press ENTER. The display will remain as is.
4. From the enclosed Sporting Clay and 5 Stand Receiver Dip Switch Settings page, locate the Sporting station you want to change. Move to the left column to locate the field ID and corresponding trap number. Enter the Field Number, then press the corresponding trap number for Trap 1, and Trap 2, and ENTER. The screen will clear, the changes are now stored.

Example.

To change your Sporting station 1: Field ID is 1, traps are 1 and 2. In step 4 above you would enter 1 1 2 ENTER.

To change your Sporting station 7: Field ID is 2, traps are 5 and 6. In step 4 above you would enter 2 5 6 ENTER.

To change your Sporting station 12: Field ID is 3, traps are 7 and 8. In step 4 above you would enter 3 7 8 ENTER.

TO RESET THE COUNTER:

1. Press PROG—The number 9 will appear.
2. Enter current USER ID or 1-2-3-4 and press ENTER—The number 1 will appear.
3. Enter 00, press ENTER. The counter is reset.

TO PROGRAM HORIZONTAL HOLD MODE:

NOTE: Horizontal Hold Mode is for wobble traps only. When the horizontal mode is ON, the T3C will turn the horizontal motor of the wobble trap on until you turn it off. When horizontal mode is OFF, the wobble trap will only move as long as you are holding the button down.

1. Press PROG—The number 9 will appear.
2. Enter current USER ID or 1-2-3-4 and press ENTER—The number 1 will appear.
3. Enter 03 and ENTER to turn the Horizontal Hold Mode ON.
Enter 04 and ENTER to turn the Horizontal Hold Mode OFF.

TO PROGRAM FIRING DELAY:

NOTE: You can program the T3C to have a firing delay of up to 7 seconds.

1. Press PROG—The number 9 will appear.
2. Enter current USER ID or 1-2-3-4 and press ENTER—The number 1 will appear.
3. Press the number 8 followed by the number of seconds to delay, and press ENTER. For example, 8-3 will delay for 3 seconds.

TO PROGRAM YOUR FIELD ID:

NOTE: Use this function when multiple 5-Stand fields are in use. The field setting of the T3C can be changed without opening the unit.

1. Press PROG—The number 9 will appear.
2. Enter current USER ID or 1-2-3-4 and press ENTER—The number 1 will appear.
3. Press the number 9 followed by the Field ID number, and press ENTER. For example, 9-2 will set the T3C to field #2.