


For operat the long Range
System to move the machine
up down or sid ways. Conect
the system betwin 87a and 87
on the relay.

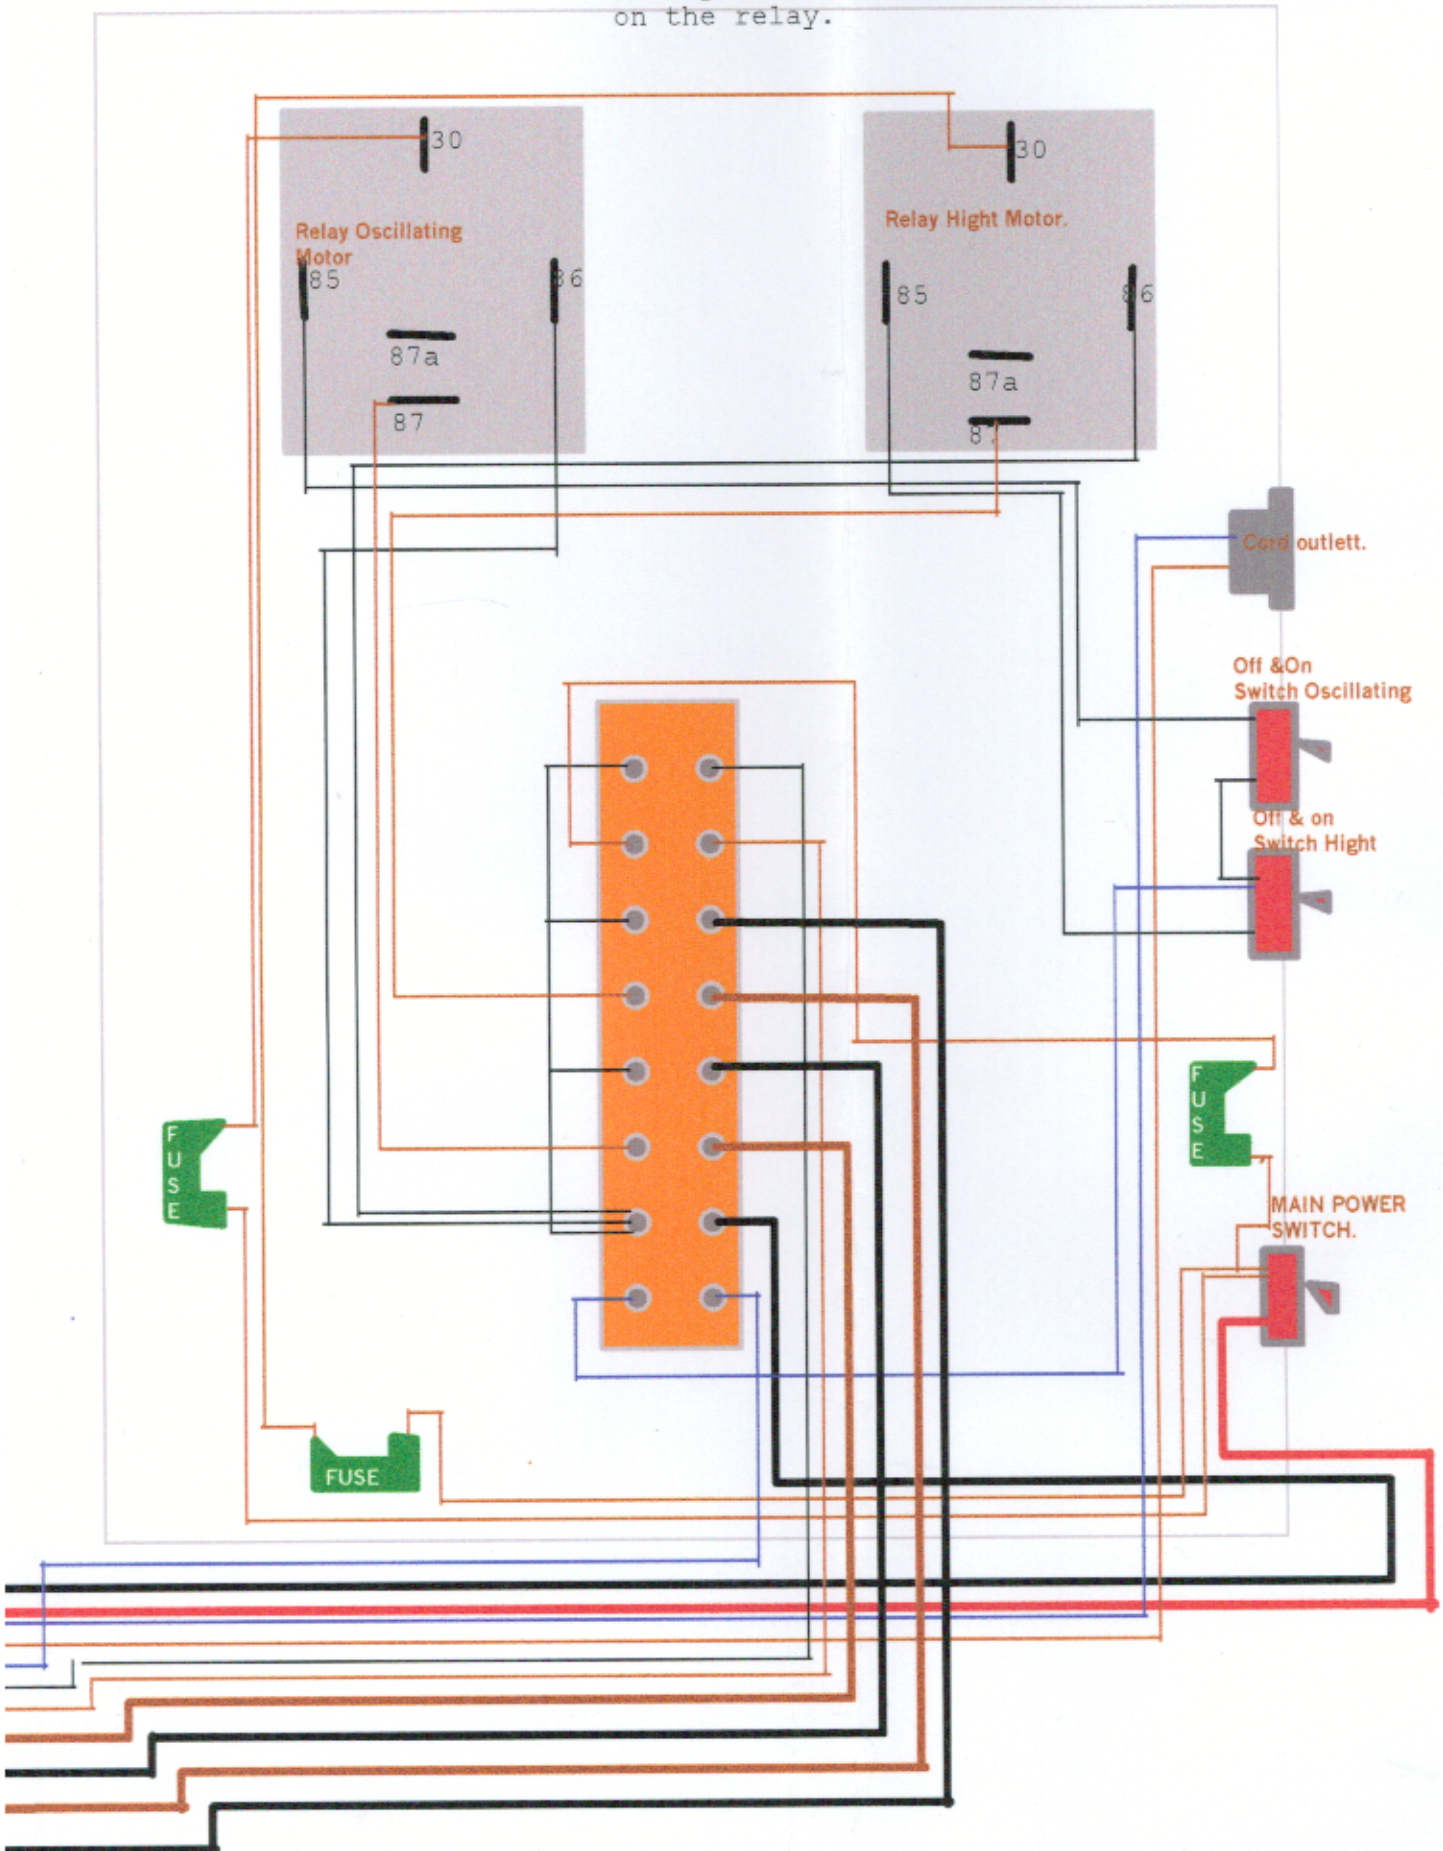

*MAIN ELECTRIC BOX
GMV 296T 12VOLT.*

