

INDEX

Adjustment(s)

Angle (Up to Serial #2739)	20
Angle (From Serial #2740...)	23
Cold Weather	31
Distance/Speed	18
Doubles	14
Field-Angle (Up to Serial #2739)	19
Height For Singles/Doubles Wobble	17
Height of Target (Up to Serial #2739)	20
Height of Target (From Serial #2740...)	23
Release Time	31
Wobble	17

Assembly

Throw Arm Brake	33
Throw Arm Cocking Pin	37
Uni-Band (Main Spring)	42

Brake

Assembly of Throw Arm Brake/Maintenance	33
Installation of the Throw Arm Brake/Maintenance	34

Changing Uni-Bands on a Main Shaft Clutch System	44
--	----

Clutch, Main Shaft

Assembly/Installation of the Uni-Band (Main Spring	
To the Main Shaft Clutch	45
Changing a Pair of Uni-Bands on a Main Shaft Clutch System	44
Installation of Main Shaft Clutch	43

Cocking Pin Assembly (Throw Arm)	37
--	----

Cold Weather	31
--------------------	----

Compression, Elevator Spring	50
------------------------------------	----

Connection

Elevator Spring (Up to Serial #2804)	49
Elevator Spring (From Serial #2809 ...)	49
Power Source	4

Cycling (Problem)	31
-------------------------	----

Diagram

#2	2, 5
#3	5
#4	5
#9	7
#11	11
#12	13
#13	13, 15, 21, 24
#14	48
#15	15
#17	16
#19	56
#20	25
#21	18
#22	21, 24
#23	38
#24	38
#25	7
#27	8, 32
#28	42
#31	33
#32	8, 33
#33	52
#34	40
#35	34
#37	51
#38	58
#40	62
#41	53
#42	3
#43	61
#45	59
#46	64
#47	49
#48	49
#49	65
#51	9
#52	9
#54	50
#55	30
#56	56

#57	63
#58	60
#59	45
#60	46
#61	47
#62	47
#81	27
#82	28
#83	29
#85	12, 15
#90	ii
#91	24
#92	55
#93	16
#94	2
#95	55
#96	55
#99	2
#100	7
#101	19, 22
 Disconnecting the Uni-Band (Main Spring)	 41
 Distance/Speed	 18
 Doubles	
Adjustments	14
Setting Singles/Doubles Roller Plates	26
"X" Doubles Finger	40
 Elevator Compression Spring, Installation	 50
 Elevator Spring, Replacement	 48
 Elevator Spring Connection	 49
 Field Angle Adjustment (Up to Serial # 2739)	 19
 Flush Hydraulic Oil	 57
 Guide Spring Position, Target	 56
 Hydraulic Cylinder For Wobble (Up to #2804)	 51, 64
 Hydraulic Cylinder For Wobble (#2805)	 52, 65

Installation

Elevator Compression Spring	50
Main Shaft Clutch	43
PAT-TRAP®	1
Throw Arm	36
Throw Arm Brake	34
Uni-Band (Main Spring)	42
Uni-Band (Main Spring) to the Main Shaft Clutch	45
"X" Doubles Finger	39
 Loading the PAT-TRAP®	 10
 Main Shaft Clutch	
Assembly of Uni-Band to Main Shaft Clutch	45
Changing a Pair of Uni-Bands on a Main Shaft Clutch	44
Installation	45
 Main Spring, Disconnecting	 41
 Maintenance	
Flushing the Hydraulic Oil	57
Hydraulic Cylinder for the Wobble	51, 52
Pump Motor	58
Roller Plate (up to #2892 to #2892)	25
Target Brush(s)	30
Throw Arm Brake	33, 34
Throw Arm Cocking Pin	37
Throw Arm Shaft Bearing	53
 Mounting the Power Control Box	 4
 OFF, How to Turn	 10
 Oil, How to Flush	 57
 ON, How to Turn	 10
 Oscillation Cylinder, Replacement of	 54
 Oscillation Soft Shift Valve, Wiring Guide	 59, 60

PAT-TRAP®

Doubles	14
How It Works	6
Installation	1
Loading	10
Singles	12
Turn OFF	10
Turn ON	10
Wiring Guide	66
Wobble	17
Positioning of the Roller Plates from #2893	26
Power Control Box	
Connecting	4
Mounting	4
Power Source Connection	4
Proximity Switches	
Field Angle Adjustment up to #2739	17
How It Works	7, 9
Hydraulic Cylinder for Wobble up to #2804	51
Two Hole Targets up to #2739	20, 22
Two Hole Targets from #2740	23, 24
Wiring Guide #11 and #12 Switches	62
Pump Motor	58
Flushing Hydraulic Oil	57
Reed Switches	
How It Works	7, 9
Hydraulic Cylinder for Wobble from #2805	52
Wiring Guide #11 and #12 Switches from #2740... ..	63
Removal/Replacement	
Elevator Spring	48
Oscillation Cylinder	54
Positioning of the Roller Plate from #2893	26
Retrofitting of the Roller Plate	26
Throw Arm	35
Turret	3

Retrofitting of the Roller Plates	25
Roller Plate	
Maintenance up to #2892	25
Position of from #2893	26
Retrofitting of	26
Setting Singles/Doubles	
Up to #2892	12, 14
From #2893... ..	31
Shifting the Target Field	20
Singles	12
Singles Finger	39
Soft Shift Valve	59, 60
Speed/Distance	18
Springs	
Disconnecting the Uni-Band (Main Spring)	41
Elevator Compression Spring	49
Elevator Spring	48, 49, 50
Main Spring (Uni-Band)	42, 45
Target Guide Spring	56
Uni-Band (Main Spring)	42, 45
Straight-Away Targets	20, 23
Switches	
#11 and #12 Wiring Guide	62, 63
(Two) 2-Hole Targets	20, 23
Target Brush Maintenance	30

Target(s)

Angle Adjustment (Up to Serial #2739)	19, 20
Angle Adjustment (From Serial #2740...)	23
Guide Spring Position	56
Height Adjustment (Up to Serial #2739)	20
Height Adjustment (From Serial #2740...)	23
Setting Speed and Distance	18
Target Field, Shifting (From Serial #2740...)	23

Target Guide Spring Position	56
------------------------------------	----

Temperature/Release Time	31
--------------------------------	----

Throw Arm

Brake Assembly	33
Brake Installation	34
Cocking Pin Assembly	37
Installation	36
Removal of	35
Shaft Bearing	53
Stopping the Throw Arm Brake	31
Throw Arm/Turret Valve Wiring Guide	61

Turret, Removal/Replacement	3
-----------------------------------	---

Uni-Band	41, 42, 44, 45
----------------	----------------

Valves

Soft Shift, Oscillation	59, 60
Throw Arm/Turret	61

Wiring Guide

Hydraulic Cylinder For Wobble (Up to Serial #2804)	64
Hydraulic Cylinder For Wobble (From Serial #2805 ...)	65
Oscillation Soft Shift Valve (Up to Serial #2609)	59
Oscillation Soft Shift Valve (From Serial #2610...)	60
PAT-TRAP®	66
Switches: #11 and #12 (Up to Serial #2739)	62
Switches: #11 and #12 (From Serial #2740...)	63
Throw Arm/Turret Valve	61

Wobble

Change over to	17
Height Adjustment For Singles/Doubles	17
Hydraulic Cylinder	51, 52, 64, 65
“X” Doubles Finger	39
Adjustment For Doubles	14