 
 


V1577A & B, V1582A & V1583A
Western Autoloading Trap Parts

 
U1W

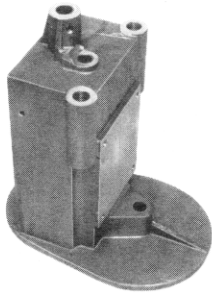


U2AW

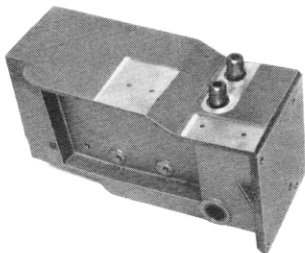


V3AW

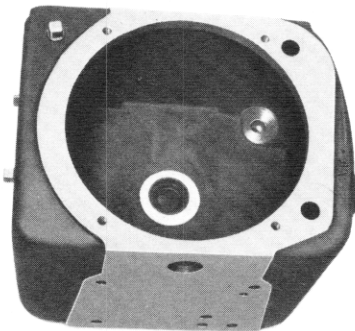


U4W

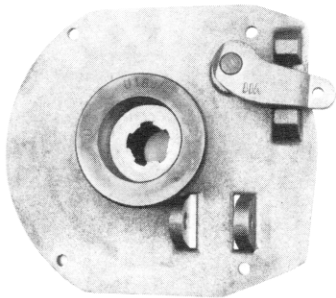 

V6

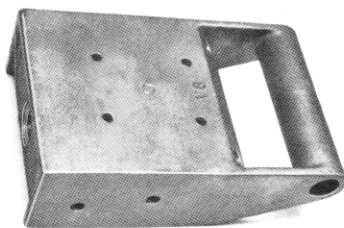 

V7A

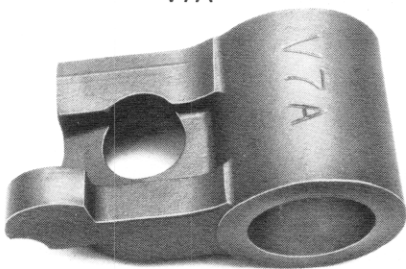 


V8




V9AW



 
V10W

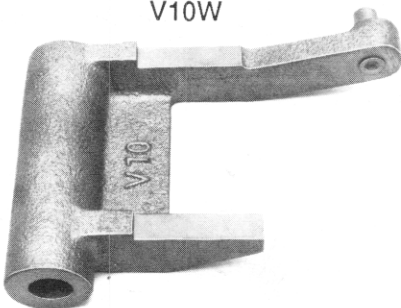


U29W

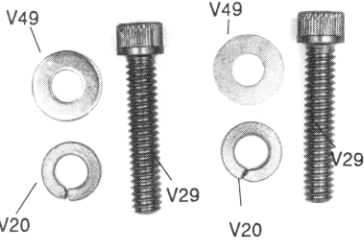 

X36W

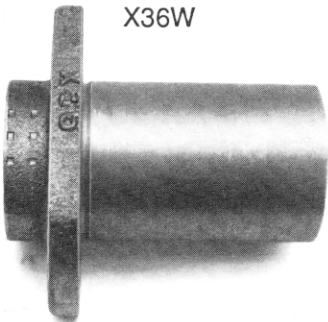 

X39AW

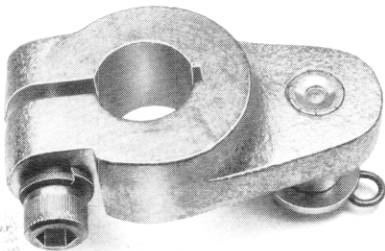 

XU40W



V1577A & B, V1582A & V1583A Western Autoloading Trap Parts


CAT.NO.	NAME	PRICE
U1W	Magazine Support Bracket Assembly	208.90
U102	Bushing for U1W (not shown)	1.50
U2AW	Frame Assembly	357.95
V3AW	Gear Housing Assembly	308.45
U4W	Gear Housing Cover and Feed Cam Assembly	186.40
* U5A	Mainspring Housing (not shown)	148.45
* V6	Solenoid Housing	33.05
V7A	Cocking Pawl	45.25
V8	Hold-Back Pawl	35.55
V9AW	Control Cam Assembly	147.50
V10W	Sear Assembly	35.90
V11W	Trigger Arm Assembly (not shown)	18.10
* U13W	Swivel Base Assembly (not shown)	123.70
* U14	Outer Bearing Race (not shown)	198.00
* U15	Support Bearing Race (not shown)	78.10
* U16	Adjustable Bearing (not shown)	100.05
* U17	Bearing Race Shim (not shown)	.95
* U18W	Ball Bearings (set of 37) (not shown)	51.50
* U19W	Screws for Swivel Base Outer Bearing Race, Magazine Guide Rails (set of 12) (not shown)	1.50
* U20W	Adj Bearing Race (set of 12 screws with lock washers and nuts) (not shown)	2.15
* U21W	Windage Adjusting Base Assembly (not shown)	119.95
* U22W	Windage Adjusting Base Pivot Assby (not shown)	44.65
* U23	Windage Latch Plunger (not shown)	6.15
* U24	Windage Latch Release (not shown)	1.25
* U25	Spring for Windage Latch and Target Stop Plungers (not shown)	.80
* U27	Carrier Arm (not shown)	100.40
U27A	Carrier Arm (Intl) (not shown)	130.55
U27AW	Carrier Arm Assembly (Intl) (not shown)	138.85
* U28	Carrier Plate (not shown)	5.35
U29W	Carrier Plate Screws (set)	1.20
* U30W	Carrier Rail Bolts (set) (not shown)	1.20
* U32AW	Carrier Rail Assembly (not shown)	7.40
V34	Carrier Rail Support (not shown)	1.20
X36W	Worm Shaft Gland Assembly	15.70
V36AW	Trap Grounding Bolt (not shown)	.55
X37	Washer for Crank Stud (not shown)	.65
X39AW	Mainspring Crank Assembly	40.00
XU40W	Mainspring Assembly	64.60

V1577A & B, V1582A & V1583A
Western Autoloading Trap Parts


X42



 X43

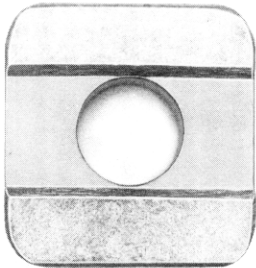


X212B

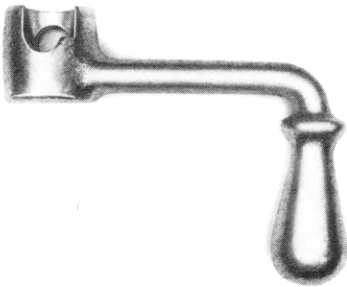 

U45




 U46

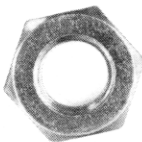

V47W

 
V47

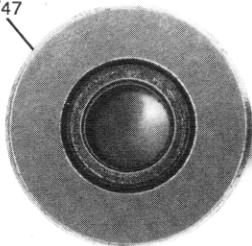


V103A



 
U49




U50

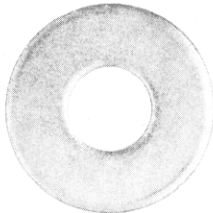 


V51A

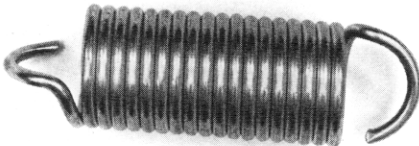 

U363

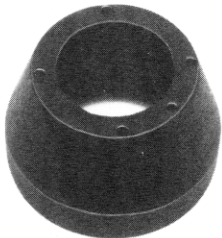 

U53

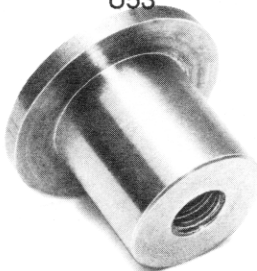 

U56



V59W

V59



N52-1A



X162



V164



V57A



V60A



X58



V62



V1577A & B, V1582A & V1583A Western Autoloading Trap Parts

 
X65



V66



V67

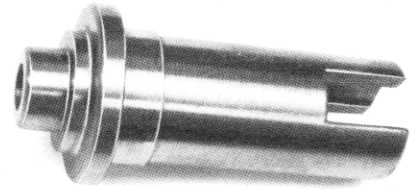

V68



 
V70




V71




V72A

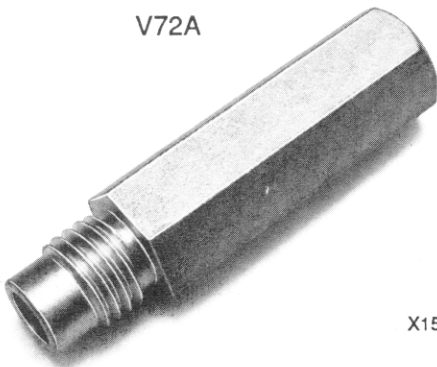

X76W

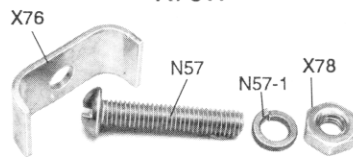 

X79W

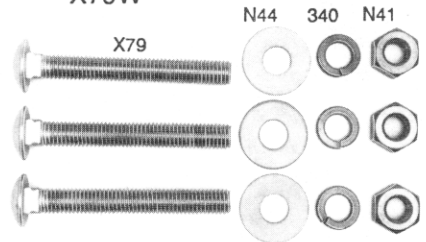 

X82AW



 
V82W



X159




X158A



X88W



 U85W



X87W



X162



V107A



V108AW



V1577A & B, V1582A & V1583A Western Autoloading Trap Parts

(See illustration on page 4 & 5)

CAT.NO.	NAME	PRICE
X42	Mainspring Adjusting Screw	10.75
X43	Mainspring Swivel	6.55
X212B	Mainspring Adjusting Speed Crank	15.65
U45	Mainshaft	78.00
U46	Nut for Mainshaft Windage Base Pivot and Spider Mounting Stud	.75
V47W	Escapement Cam Roll Assembly	12.55
U49	Carrier Hold Down Spring	2.25
U50	Carrier Hold Down Washer	.90
V51A	Escapement Lever Spring	1.40
U363	Escapement Cushion	3.00
U53	Escapement Cushion Holder	2.25
U56	Trigger Pull Rod	5.40
V57A	Trigger	7.20
X58	Spring for Trigger Arm and Push Rod Operator	1.20
V59W	Trigger Mounting Bolt Assembly	.75
V60A	Trigger Bushing	1.50
V62	Shaft for Sear and Hold-back Pawl	3.95
V63W	Pawl Holding Magnet Assembly (not shown)	14.05
X65	Cocking Pawl Spring	1.20
V66	Firing Pin	3.50
V67	Firing Pin Guide	17.35
V68	Firing Bar	10.60
V70	Sear Plunger	4.30
V71	Sear Spring	1.50
V72A	Sear Plunger Bushing	9.00
* X76W	Cable Anchor Clip Assembly	.87
* X79W	Base Bolts (set of 3)	.90
V82W	Stop Finger Bracket and Guide Shelf Bracket Bolts (set of 2 bolts with extra lockwashers)	.80
X82AW	Solenoid Mounting Bolts (set of 4 bolts with lockwashers)	.90
U85W	Roll Pins for U225 (set)	.95
X87W	Screws for Gear Housing Cover or Cocking Worm Gland (also to pull V62 shafts from V3 housing)	1.30
X88W	Clamp Screw Assembly for Mainspring Crank	.95
V93W	Gear Housing Mounting Screws (set of 4) (not shown)	2.20
X94	Key for Mainspring Crank (not shown)	.65
V105W	Mainshaft Oil Seal and Lower Bearing Assembly (not shown)	10.45
X106A	Worm Shaft Oil Seal (not shown)	2.45
** V107A	Cocking Worm	56.60
** V108AW	Worm Gear Assembly	243.25

 
 
 
 
 
 
 
* NOT FOR USE ON V1582A AND V1583A TRAPS.

** V1582A & V1583A TRAPS BEGINNING WITH SERIAL NO. U & US2748
USE V107A & V108AW.

V1577A & B, V1582A & V1583A Western Autoloading Trap Parts



V1577A & B, V1582A & V1583A
Western Autoloading Trap Parts

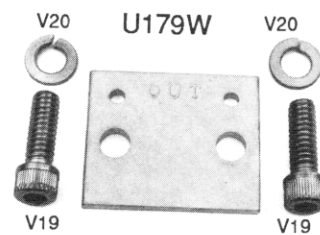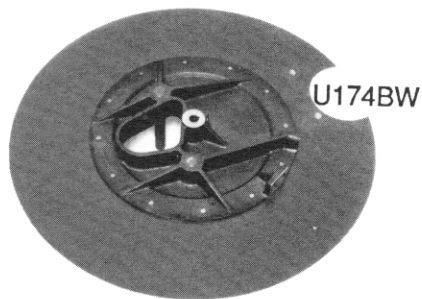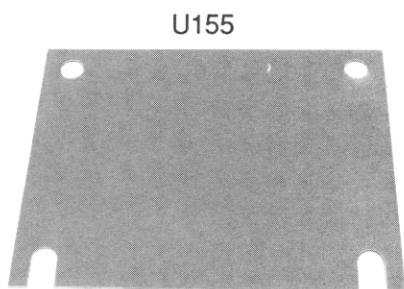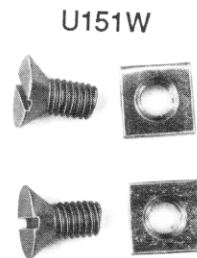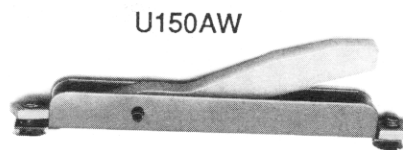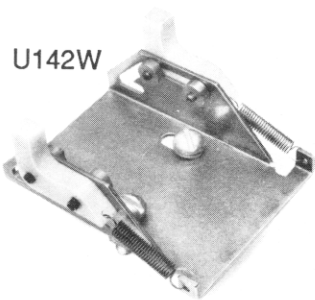


V1577A & B, V1582A & V1583A Western Autoloading Trap Parts

(See illustration on pages 7 & 8)

CAT.NO.	NAME	PRICE
V110W	Planet Gear Assembly	31.30
* V111A	Cocking Ring Gear and Ratchet	193.20
* X117A	Power Cord Assembly	56.85
* U119	Power Receptacle (not shown)	40.95
* U120	Release Outlet Receptacle (not shown)	28.60
X400	Release Switch Assembly (100 ft cable)	112.75
U122BW	Motor Cable	7.95
* X125AX	Release Switch Only (for X125A release) (not shown)	8.00
* Z6A	Release Switch Only (for X125B,C & D release) (not shown)	5.55
* V126W	Outlet Box Assembly	3.20
X127	Release Solenoid (115V)	44.40
* V128	Cable Connector	1.15
XU129A	Cocking Motor (115/230 V. 60/50 HZ)	162.85
X130B	Cocking Motor Coupling	11.40
X131	Capacitor for Cocking Motor	41.10
* U130A	Angle Changing Motor Coupling (not shown)	26.45
* U131AW	Angle Changing Motor Assembly (115/230 V 60/50 HZ) (not shown)	220.95
X132	Worm Thrust Bearing	7.10
X133	Oil Filler and Level Gauge Plugs (not shown)	1.00
U134W	Assorted Cotter Pins (not shown)	1.05
* U135W	Elevation Pivot Assembly (not shown)	10.60
* U136	Elevation Screw Swivel (not shown)	10.90
* U137AW	Elevation Adjusting Screw Assembly (not shown)	50.95
V141	Tool for Guiding Main Shaft thru Oil Seal (not shown)	3.80
U142	Target Stop Finger Bracket (not shown)	6.20
U142W	Target Stop Finger Bracket Assembly	33.00
U143A	Target Stop Finger (not shown)	6.60
U144	Stop Finger Retaining Collar (not shown)	1.20
U145W	Stop Finger Guide Pin (also used for items U24, U149B and U178, set of 4)	1.90
U146	Stop Finger Spring (not shown)	.95
U149B	Target Feed Finger (not shown)	1.30
U150	Target Feed Finger Bracket (not shown)	1.05
U150AW	Target Feed Finger Bracket Assembly	6.25
U151W	Target Feed Finger Bolts (set of 2)	.65
U155	Magazine Support Bracket Shim	1.75
U156W	Magazine Support Bracket Mounting Screw (set of 4)	4.25
N160	Magazine Friction Spring (not shown)	13.55
V161W	Solenoid & Indexing Gear Housing Screws (not shown)	1.15
N163	Magazine Friction Spring Washer (not shown)	1.50
V163W	Trap Motor Mounting Bolts (set of 4)	1.15
U165AW	Angle Changing Motor Mounting Screws (set of 4) (not shown)	1.20
V173W	Trap Motor Support Screw (set of 2) (not shown)	.70
U174BW	Magazine Base Assembly	264.15
U177W	Escapement Push Rod Assembly	14.00
U178	Escapement Push Rod Spring	1.10
U179W	Push Rod Spring Holder Assembly	5.75

V1577A & B, V1582A & V1583A
Western Autoloading Trap Parts

 U180AW

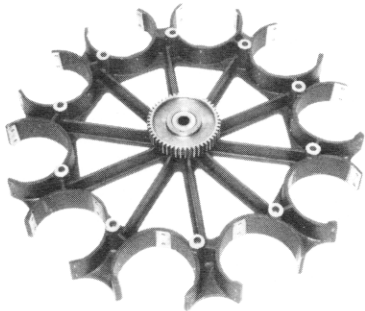


U181



U182A



 U183CW

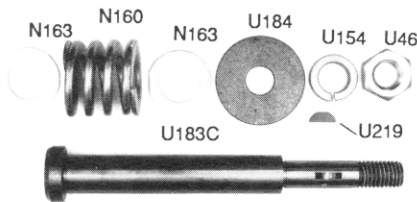


U185W



U186



 U189AW

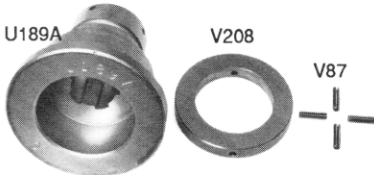


U190W




U187W



 
V194W

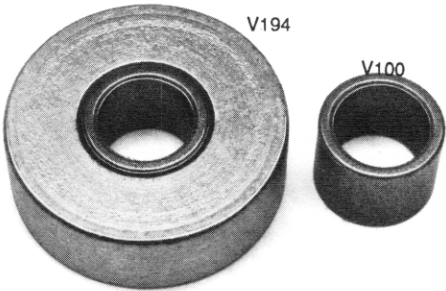


V192W

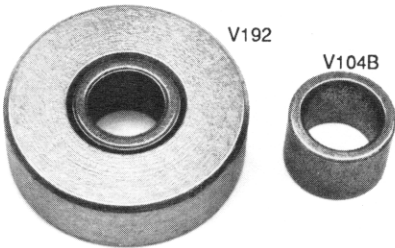 


V191W

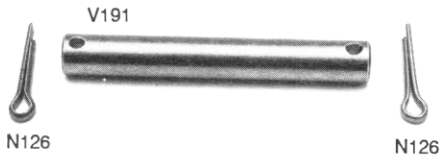 

V196W

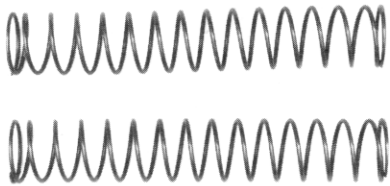 

V197W

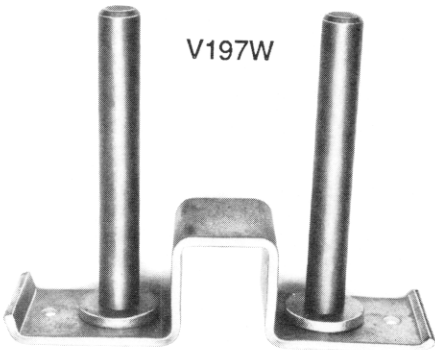 

V205W

