



CVR wireless Switch Channel	Real Channel	Freq GHz
	0	2.402
	1	2.403
	2	2.404
	3	2.405
	4	2.406
	5	2.407
	6	2.408
	7	2.409
	8	2.410
	9	2.411
	10	2.412
	11	2.413
	12	2.414
	13	2.415
	14	2.416
	15	2.417
	16	2.418
	17	2.419
	18	2.420
	19	2.421
	20	2.422
	21	2.423
	22	2.424
	23	2.425
	24	2.426
	25	2.427
	26	2.428
	27	2.429
	28	2.430
	29	2.431
	30	2.432
	31	2.433
	32	2.434
	33	2.435
	34	2.436
	35	2.437
	36	2.438
	37	2.439
	38	2.440
	39	2.441
	40	2.442
	41	2.443
	42	2.444
	43	2.445
	44	2.446
	45	2.447
	46	2.448
	47	2.449
	48	2.450

Wifi Real Channel	Center Freq GHz	Low Freq -11Mhz	High Freq +11Mhz
1	2.412	2.401	2.423
2	2.417	2.406	2.428
3	2.422	2.411	2.433
4	2.427	2.416	2.438
5	2.432	2.421	2.443
6	2.437	2.426	2.448
7	2.442	2.431	2.453
8	2.447	2.436	2.458
9	2.452	2.441	2.463
10	2.457	2.446	2.468
11	2.462	2.451	2.473
12	2.467	2.456	2.478 Non USA
13	2.472	2.461	2.483 Non USA
14	2.477	2.466	2.488 Non USA

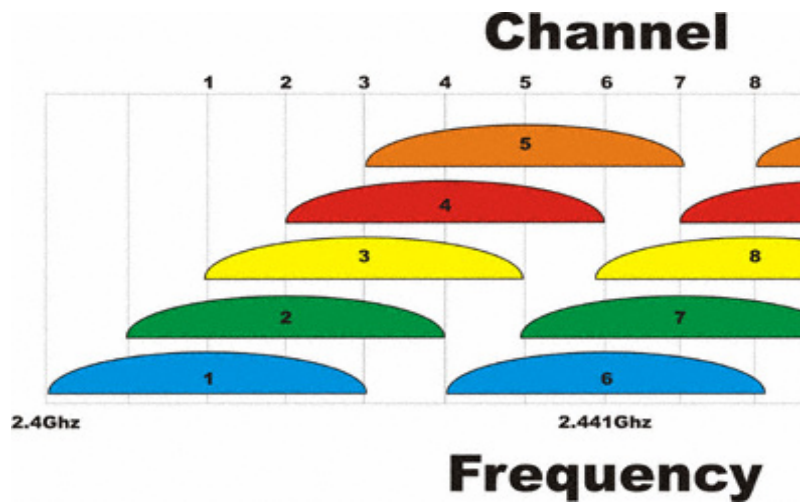

49	51	2.451
50	52	2.452
51	53	2.453
52	54	2.454
53	55	2.455
54	56	2.456
55	57	2.457
56	58	2.458
57	59	2.459
58	60	2.460
59	61	2.461
60	62	2.462
61	63	2.463
62	64	2.464
63	65	2.465
64	66	2.466
65	67	2.467
66	68	2.468
67	69	2.469
68	70	2.470
69	71	2.471
70	72	2.472
71	73	2.473
72	74	2.474
73	75	2.475
74	76	2.476
75	77	2.477
76	78	2.478
77	79	2.479
78	2	2.402
79	3	2.403
80	4	2.404
81	5	2.405
82	6	2.406
83	7	2.407
84	8	2.408
85	9	2.409
86	10	2.410
87	11	2.411
88	12	2.412
89	13	2.413
90	14	2.414
91	15	2.415
92	16	2.416
93	17	2.417
94	18	2.418
95	19	2.419
96	20	2.420
97	21	2.421
98	22	2.422
99	23	2.423

nel

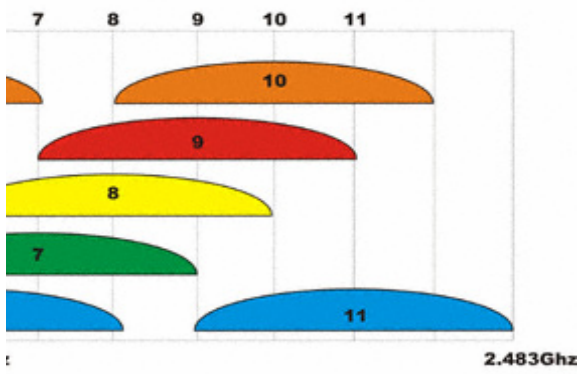

ency